


# BUTTRESS THREAD GROOVE WIDTH GAUGES

CAN BE CUSTOMIZED  
ACCORDING TO WORKPIECES




2244-N1

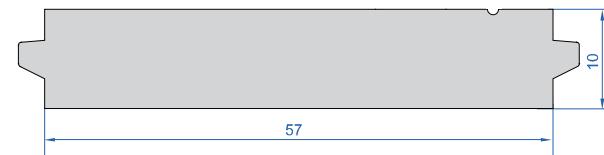


Unit: mm

application

Put the Go gauge into measured thread slot, and there should be no gap between the gauge and the bottom of the thread.

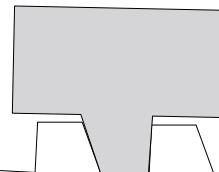

Put the No-Go gauge into measured thread slot, and there should be a gap between the gauge and the bottom of the thread.

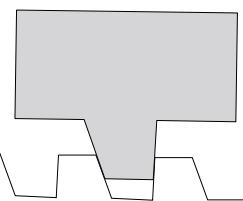

- Measure groove width of buttress thread
- Supplied with Go and No-Go gauges together

Code	Taper	Number of thread per inch	Remark
2244-W1	1:16	5	Buttress external thread groove width measurement ( $\leq 7 \frac{5}{8}"$ )
2244-W2	1:16	5	Buttress external thread groove width measurement ( $\geq 8 \frac{5}{8}"$ )
2244-N1	1:16	5	Buttress internal thread groove width measurement (4 1/2"-13 3/8")
2244-W3	1:12	5	Buttress external thread groove width measurement ( $\geq 16"$ )
2244-N2	1:12	5	Buttress internal thread groove width measurement ( $\geq 16"$ )