

# ZERO SETTER WITH INFRARED TRANSMISSION (FIVE-SIDE)



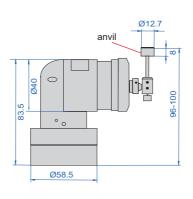

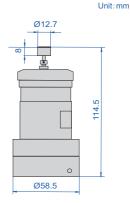



9415-1

9415-2

9415-1

- Suitable for all kinds of small and medium-sized machining centers, CNC boring, milling machines and five-axis CNC machine tools, etc.
- Automatically set the tool length parameters before CNC machining process
- Automatic detection of tool wear or damage during CNC machining
- Automatic detection of tool wear or damage after CNC machining is completed
- The working surface of anvil is ceramic and has chamfer, which can greatly improve the service life
- Infrared transmission, fast response, high reliability
- The battery (5% utilization rate per shift) can be used continuously for 90 days
- Supplied with automatic zero setter software package
- Can be used in combination with infrared transmission probes for CNC machine tools (9414-1, 9414-2, 9414-3, 9414-4, 9414-5)
- Optional accessory: square anvil (code 9412-B1)



9414-A

## ZERO SETTER SPECIFICATION

Code	9415-1	9415-2	
Height (factory setting)	96-100mm	114.5mm	
Diameter of zero setter	Ø12.7mm		
Trigger direction	±X, ±Y, +Z		
Trigger protection stroke	X-Y ±5mm, Z 8mm		
Trigger force of zero setter all directions	X and Y axis: 0.5-1N, Z axis: 1.5N	X and Y axis: 0.5-1N, Z axis: 5N	
Repeated trigger accuracy	≤1µm		
Start/stop mode	M code control *		
Hardness of the zero setter	HM8.5		
Dust/waterproof	IP68		
Power supply	2xLS14250 lithium battery		

<sup>\*</sup>Before purchasing, please confirm whether CNC still has enough M code to be used


#### RECEIVER SPECIFICATION

Code	9414-A			
Protection function	low battery voltage, overstroke and signal interrupt protection**			
Applicable	zero setter code <b>9415-1</b> , <b>9415-2</b> ; probe code <b>9414-1</b> , <b>9414-2</b> , <b>9414-3</b> , <b>9414-4</b> , <b>9414-5</b>			
Infrared transmission/reception range	3m			
Cable length	8m			
Dust/waterproof	IP68			
Power supply	input voltage: 24V±10% (DC), load current (max): 50mA			

<sup>\*\*</sup>When battery voltage is low or zero setter is in wrong state, receiver sends a signal to CNC machine to stop working

### **SQUARE ANVIL (OPTIONAL)**

Code	Shape	Dimension	Material
9412-B1	square	16×16mm	ceramic

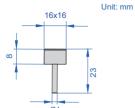

application



# **AUTOMATIC ZERO SETTER SOFTWARE (INCLUDED)**

- Automatic calibration of the center position of the anvil
  Standard knife length setting
  Semi-automatic and fully automatic tool setting for tool length





4. Semi-automatic and fully automatic tool diameter settings



5. Automatic detection of tool wear and breakage

