



# BORE GAGES FOR BARRIER INSIDE BORES



MEASURE DIAMETER OF  
BORES WITH BARRIER INSIDE

ATTENTION: NOT SUITABLE  
FOR 0.001MM DIAL INDICATORS

- Measure diameter of bores with barrier inside
- Optional accessory:
  - 0.01mm graduation dial indicators
  - Setting ring (code 6312)

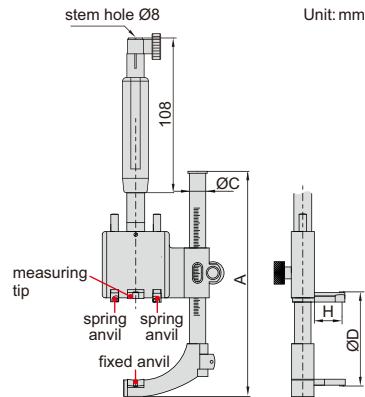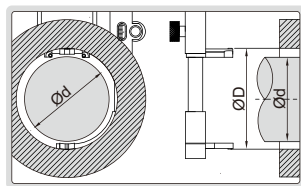

dial indicator is  
not included



2432-105

Code	Range $\varnothing D$	Diameter of barrier $\varnothing d$	Travel of measuring tip	Measuring depth H	Accuracy (without dial indicator)	Measuring force	A	$\varnothing C$
2432-70	25-70mm	<math><D-6</math>(less than 45mm) *	2.5	12	0.01	1.5N	115	10
2432-105	35-105mm	<math><D-11</math>(less than 70mm) *	3.0	18	0.01	2.5N	150	11
2432-210	100-210mm	<math><D-20</math>(less than 130mm) *	3.5	30	0.015	2.5N	233	15
2432-280	100-280mm	<math><D-20</math>(less than 130mm) *	3.5	30	0.015	2.5N	303	15
2432-500	200-500mm	<math><D-20</math>(less than 240mm) *	3.5	30	0.02	2.5N	622	30

\* For example, range of 2432-70 is 25-70mm, diameter of barrier is <math><D-6</math> (less than 45mm)  
 When measuring size is 40mm, 
 When measuring size is 60mm,