


Spare parts for crankshaft tester 2841 series

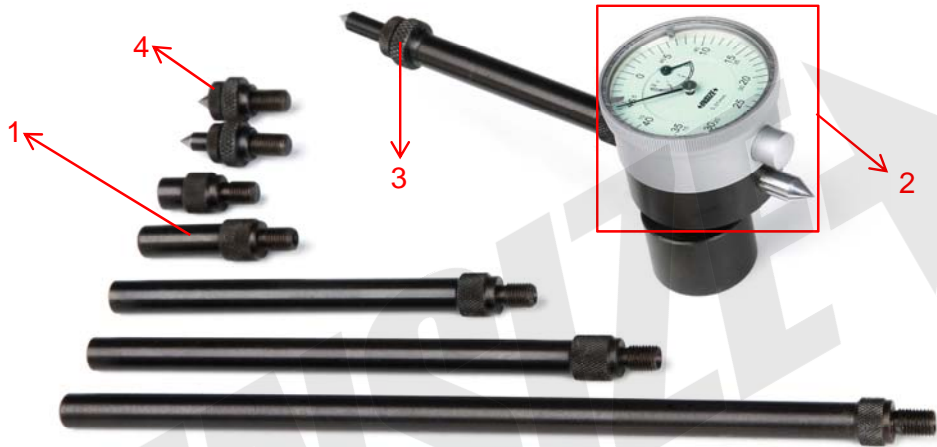

Part NO.	Code	Description
1	SP-EXTENSION ROD-16	Extension rod
	SP-EXTENSION ROD-32	
	SP-EXTENSION ROD-64	
	SP-EXTENSION ROD-96	
	SP-EXTENSION ROD-128	
	SP-EXTENSION ROD-192	
2	SP-DIAL-2841	Dial indicator(not include balance block)
3	SP-ANVIL-LOCK-NUT-2841	Locking nut for anvil
4	SP-ANVIL-2841-8.5	8.5mm interchangeable anvil for 2841
	SP-ANVIL-2841-13	13mm interchangeable anvil for 2841
	SP-ANVIL-2841-20	20mm interchangeable anvil for 2841

