
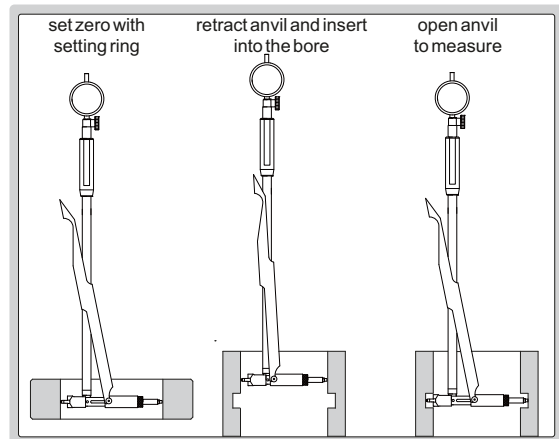


INTERNAL GROOVE BORE GAGE

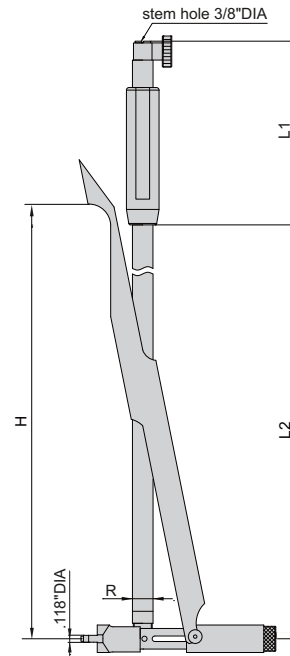

- Measure diameter of internal grooves (width of groove > .118")
- Anvil is needed
- Optional accessory:
 - Dial indicator (graduation .001" or .0001" or .00005")
 - Setting ring (part no. 6313)

Part No.	Range	Retraction of anvil	Measuring depth H	Accuracy (without dial indicator)	Repeatability (without dial indicator)	R	L1	L2
2433-E120	2.4-4.7"	.335"	7.087"	79µin	39µin	.394"	4.134"	8.465"
2433-E180	4.7-7.1"	.906"	9.055"	79µin	39µin	.472"	4.252"	11.220"
2433-E300	7.1-11.8"	11.8"	9.055"	79µin	39µin	.709"	5.118"	11.220"

ANVIL(OPTIONAL)

Part No.	Remark
2433-P□□□□	We design and make anvils according to the grooves to be measured.*

* Note: please provide the dimension of grooves to be measured.