


QUICK AUTOMATIC MEASUREMENT SYSTEM (LIGHTWEIGHT TYPE) CODE RBT-QM02

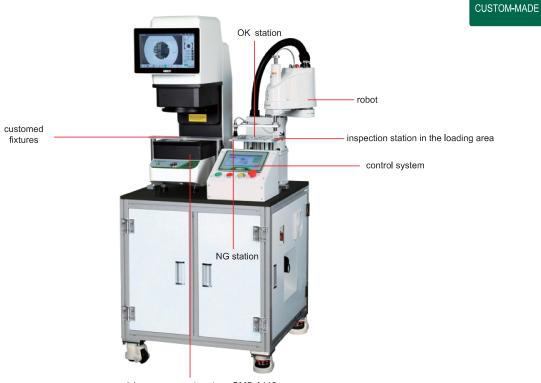

quick measurement system QMS-A110



OPERATION PROCESS

- Step 1: Place the workpiece manually on the recess in the loading area.
- Step 2: Press the reset button to return the robot to the initial position.
- Step 3: Press the start button, the system prompts whether the workpiece is correctly placed and click OK.
- Step 4: The robot picks up the workpiece and places it in the QMS test position.
- Step 5: The QMS initiates a measurement and outputs the results.
- Step 6: The robot removes the workpiece.
- Step 7: The robot places the workpiece in the OK or NG station according to the measurement results.

- Lightweight SCARA robot for high-speed and precision
- Quick measurement system automatically measures the dimensions of the workpiece and provides real-time feedback to the control system
- Control system Modbus Tcp via bus communication, high speed, high efficiency and easy to extend

SPECIFICATION

SPECIFICATION		
Robot	robot arm spreading	400mm
	Max working speed	7225mm/s
	Max weight of workpiece	3kg
	repeat positioning accuracy	±0.02mm
	number of control axis	4
	communication protocols	Ethernet Modbus Tcp
Quick measurement system	view field	100×80mm
	measurement range	98×78mm
	measurement accuracy	±3µm
	repeatabilitiy	1µm
	measurement time	<2s
Power supply		220V, 50Hz, 3000W
Supply pressure		0.5~0.6MPa
Environmental requirement		temperature: 20°C±2°C, relative humidity: 30%~80%
Weight		150kg


^{*} The quick measurement system is available in different models depending on the workpiece


STANDARD DELIVERY

robot body	
robot control cabinet	
programming guide	
main unit	
computer	
software and dongle	
1set	
1set	

Quick measurement system software (included)

■ Automatically measure widths, holes, rings, angles at the same time, simple and efficient

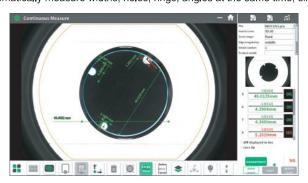

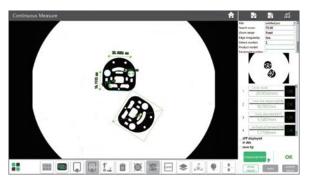

■ Measuring result can be stored automatically, OK items and NG items can be counted automatically

